

**Index**

- 3D Align . . . . . 8-44  
 7 Easy Steps to CNC Programming. . .  
 A Beginner's Guide. . . . . 11-71
- A**  
 Arc . . . . . 8-42, 8-47 - 8-48, 10-65  
 Absolute mode, G90 . . . . . 11-70  
 Automatic Roughing . . . . . 5-26, 5-29  
 Automatic Roughing. . . . . 10-67
- B**  
 Bottom Face Tool Path. . . 8-47, 8-51  
 Breaking geometry . . . . . 8-52  
 Bring Tool Down . . . . . 10-66
- C**  
 Chain Select . . . . . 8-46, 8-50, 9-60,  
 10-65, 10-68  
 Chamfer . . . . . 8-42, 8-48, 9-58 - 9-59  
 Change tool libraries at will. . . . 7-36  
 Control throughput limitations . . . 7-34  
 Cutting Depth . . . . . 5-26, 5-30  
 Cutting Height . . . . . 5-24
- D**  
 Divide . . . . . 8-51, 9-60, 10-65  
 Data starvation . . . . . 7-35  
 Differences between v19 & v20. 11-72  
 Drawing. . . . . 5-23  
 Drawing . . . . . 11-73  
 Drilling without Canned Cycles . 10-66
- E**  
 Errors in G code . . . . . 8-49, 11-70  
 Excel Formulas. . . . . 7-38
- F**  
 Fit all. . . . . 8-41 - 8-42, 8-54  
 Feed . . . . . 5-27  
 Feed / Normal . . . . . 5-24  
 Feed / Plunge . . . . . 5-24  
 Find . . . . . 11-71  
 Find Next . . . . . 11-71
- G**  
 General Tab. . . . . 8-45, 10-66  
 G28 . . . . . 11-70
- H**  
 Horsepower . . . . . 7-34
- I**  
 Incremental mode, G91 . . . . . 11-70  
 Insert NC . . . . . 10-65
- J**  
 Join . . . . . 8-43
- L**  
 Layer . . . . . 8-45, 8-50
- M**  
 Machine, Auto . . . 8-48, 9-60, 10-65  
 Machine accuracy . . . . . 7-35  
 Machine, Auto . . . . . 10-67 - 10-68  
 Machining envelope . . . . . 7-34  
 Memory limitations . . . . . 7-34  
 Modifying geometry . . . . . 8-52  
 Move to Point . . . . . 10-66
- N**  
 NC Menu . . . . . 8-48  
 Need for speed. . . . . 7-35
- O**  
 Offsetting geometry . . . . . 8-52
- P**  
 Point . . . . . 8-43  
 Pocket, Finish Pass . . . . . 9-59  
 Program, Start. . . . . 10-65
- R**  
 Rotate . . . . . 8-45, 8-49, 8-55  
 Rapid Plane . . . . . 5-26  
 Rigidity of the setup . . . . . 7-35
- S**  
 Save . . . . . 8-41, 8-48, 9-59  
 Setting up the Tool Library . . . . 7-35  
 Setup . . . . . 7-35  
 Setup, Configuration . . . . . 10-66  
 Simulate . . . . . 11-71  
 Special/NC-CAM . . . . . 10-65  
 Start . . . . . 10-65

|                     |       |
|---------------------|-------|
| Step 1. . . . .     | 6-32  |
| Step 2 - . . . . .  | 7-34  |
| Step 3. . . . .     | 7-35  |
| Step 4. . . . .     | 8-41  |
| Step 4A. . . . .    | 9-56  |
| Steps 5-6 . . . . . | 10-65 |
| Step 7 . . . . .    | 11-70 |

**I**

|                                    |                        |
|------------------------------------|------------------------|
| Translate . . . . .                | 8-41, 8-43, 8-48, 9-60 |
| Technology . . . . .               | 5-23                   |
| Technology Tab. . . . .            | 7-40                   |
| Tool changer limitations . . . . . | 7-34                   |
| Tool library . . . . .             | 7-36, 7-40             |
| Tool life.. . . . .                | 7-35                   |
| Tool Setup Options . . . . .       | 5-24                   |
| Tool size limitations. . . . .     | 7-34                   |

**U**

|                        |                      |
|------------------------|----------------------|
| Undo Replace . . . . . | 8-55                 |
| UCS bug . . . . .      | 8-48                 |
| Update CAD. . . . .    | 10-66, 10-67 - 10-69 |

**V**

|                     |                         |
|---------------------|-------------------------|
| View Port . . . . . | 8-42, 8-48, 9-60 - 9-61 |
|---------------------|-------------------------|

**W**

|                             |      |
|-----------------------------|------|
| Weight limitations. . . . . | 7-34 |
| Work around . . . . .       | 8-47 |

**Z**

|                          |      |
|--------------------------|------|
| Z-Displacement . . . . . | 5-24 |
|--------------------------|------|